


# Installation Guide

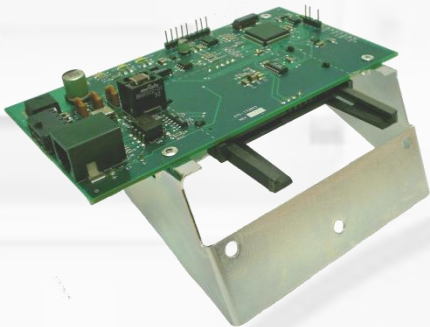

## Maytag PR CONTROL CONSOLE MOUNT

### Cashless Laundry Kit - Contents

Qty	Part Number	Description
1	DSLIM	PR (Console) Card Reader
Qty	Required Tools	
1	T-20-T (TT20) Security Screwdriver	
1	5/16" Nut-Driver (or deep-well socket)	

If you cannot locate and/or identify any of the components listed above, please contact Micropayments Customer Service at:

**Tel: 800-332-4835 Press 2**



## **!! WARNING !!**

**MAKE SURE THAT ALL POWER HAS BEEN REMOVED FROM THE MACHINE BEFORE ATTEMPTING TO INSTALL ANY HARDWARE OR CABLING!**

## Preparation

Disconnect the laundry machine from all power sources before performing any of the following steps.

The Heartland Micropayments **SLIM-PR** reader is designed to be installed in Maytag PR model washers and dryers. The readers are configured and programmed with cards. In addition, cards are used to view total non-resettable debits, broken down by user or test vends and to place the PR machine in service mode. The cards are described as follows:

- **System Key Card** - Loads the encryption keys in the reader for card authentication.
- **SLIM Programming Card** - Programs the Site Codes, discount levels and card maximum setting into the SLIM reader
- **View Debits Card** - Allows the viewing of grand total debits broken down by user and test vends
- **Debit Maintenance Card** - Used by the service technician to perform test transactions
- **SLIM Service Mode Card** - The SLIM Service Mode Card is used to place the laundry machine it is attached to into service mode, thus preventing the need to dismantle the machine.

## Installation


**1**

Open the backsplash on the machine by removing the 4 screws at the corners of the panel.



**2**

Lower the panel and locate the 3 mounting studs near the right side of the panel.

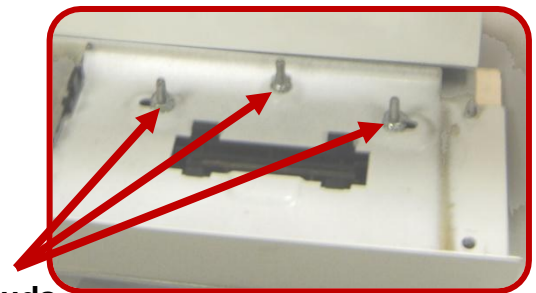


**Mounting Studs**

# Installation


**3**

Install the reader on the 3 mounting studs being certain that the reader is correctly oriented so that the plastic card bezel on the front of the reader fits through the card slot opening in the front of the panel. Do not over-tighten.

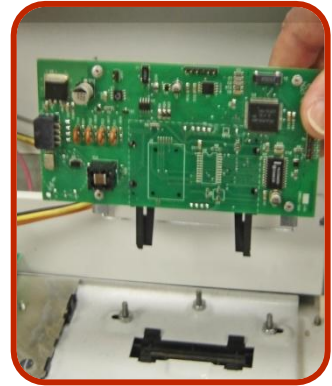


**4**

Attach the card reader cable to the card reader as shown in the yellow circle. The locking tab on the harness connector should be aligned with the small protrusion on top of the reader connector. Press the connector in place until the tab locks. *For PR console models, the interface cable is supplied with the machine*

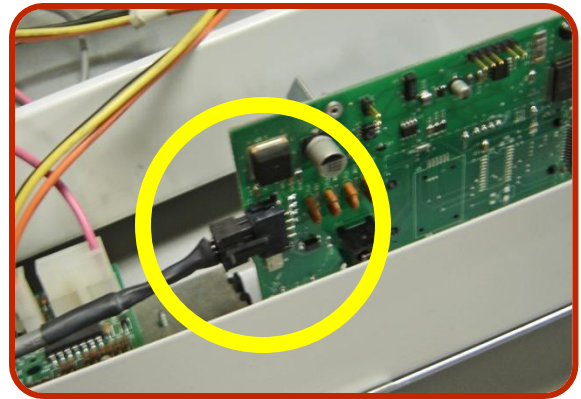

**5**

Attach the white Molex connector to the control board of the PR Laundry Machine as shown in the yellow circle.

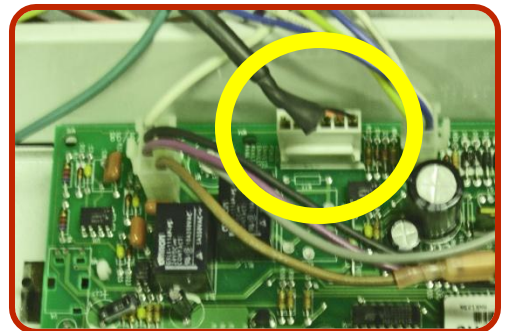

**6**

Close the back panel on the machine while ensuring that none of the wiring is pinched between the front panel and the console housing. Replace the 4 panel screws and tighten them snugly..



# Programming & Testing

## Programming

Connect power to the machine and verify that the machine displays a normal startup sequence without errors.

When the startup sequence is complete, the display should indicate “F-62”.

You may now program the device using the following cards:

1. Insert the **System Key Card** into the card reader . Remove when prompted.
2. Insert the **Price & Configuration Card** into the card reader . Remove when prompted.
3. Insert the **Sitecode Definition Card** into the card reader . Remove when prompted.

## Testing

Insert a **Debit Maintenance Card** or **User Card** into the card reader.