


WaveReader – Card Only Mounting (General)

Most Card-Ready machines will use an internal bracket [1 & 4] to affix the WaveReader to the front panel and/or console. The Wave Reader has metal 'wings' that extend into the machine, and attach to the mounting bracket with stand-offs [2 & 3]. The specific bracket type will be determined by the model number of the machine. Our Customer Service Department can determine the proper part number needed.

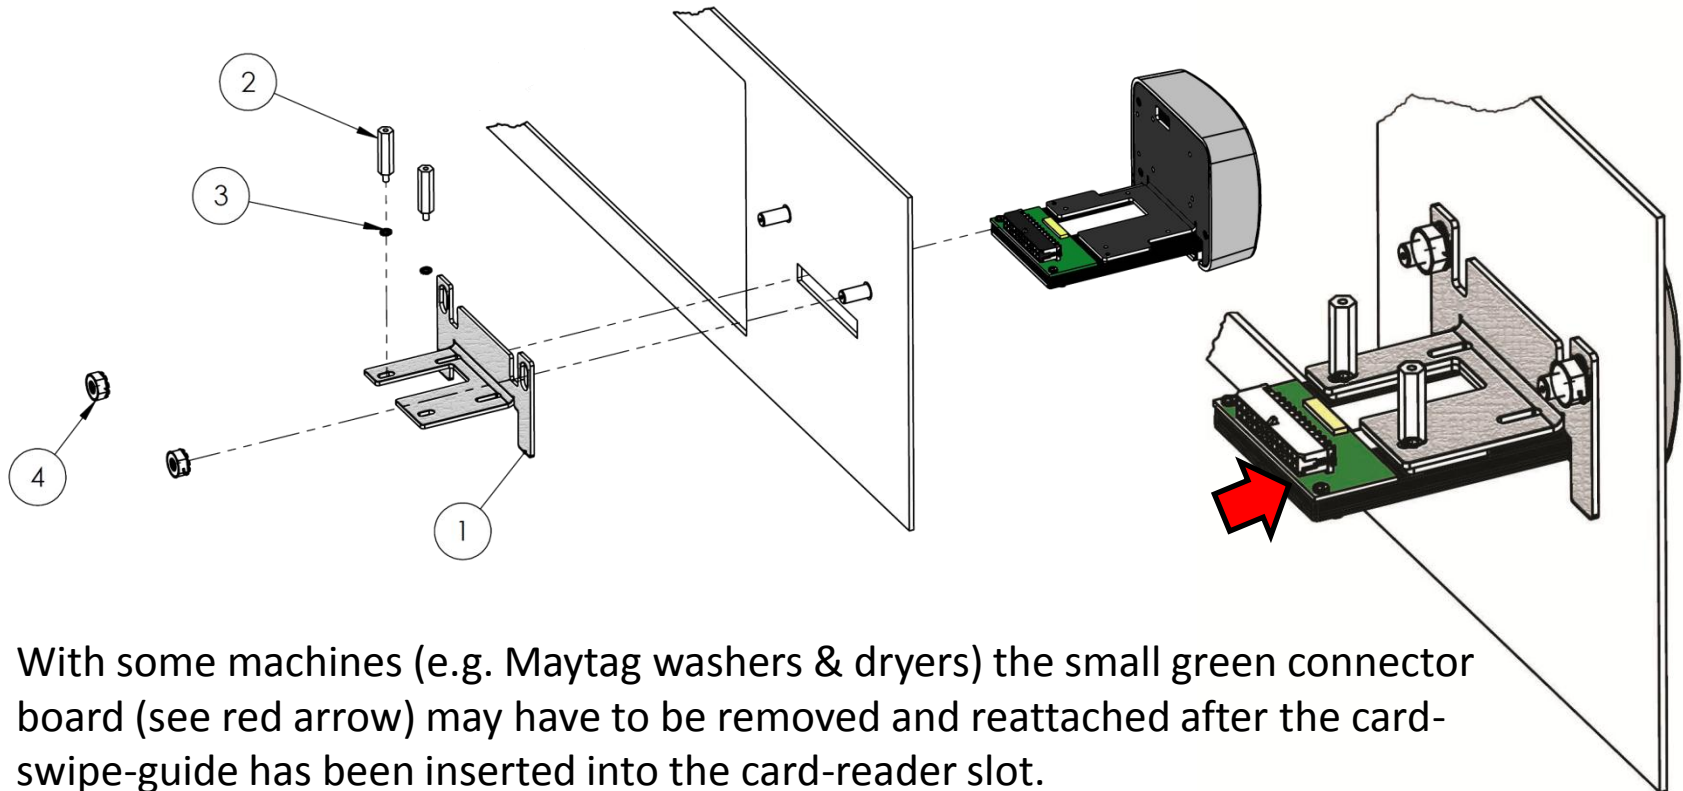

With some machines (e.g. Maytag washers & dryers) the small green connector board (see red arrow) may have to be removed and reattached after the card-swipe-guide has been inserted into the card-reader slot.